



CATALOGUE

aporta
FOLDING DOORS & WALLS


Installation manual



INSTALLATION FOLDING DOOR

Follow this instruction manual for a correct placement of your folding door!

ASSEMBLY PARTS IN THE PACKAGE

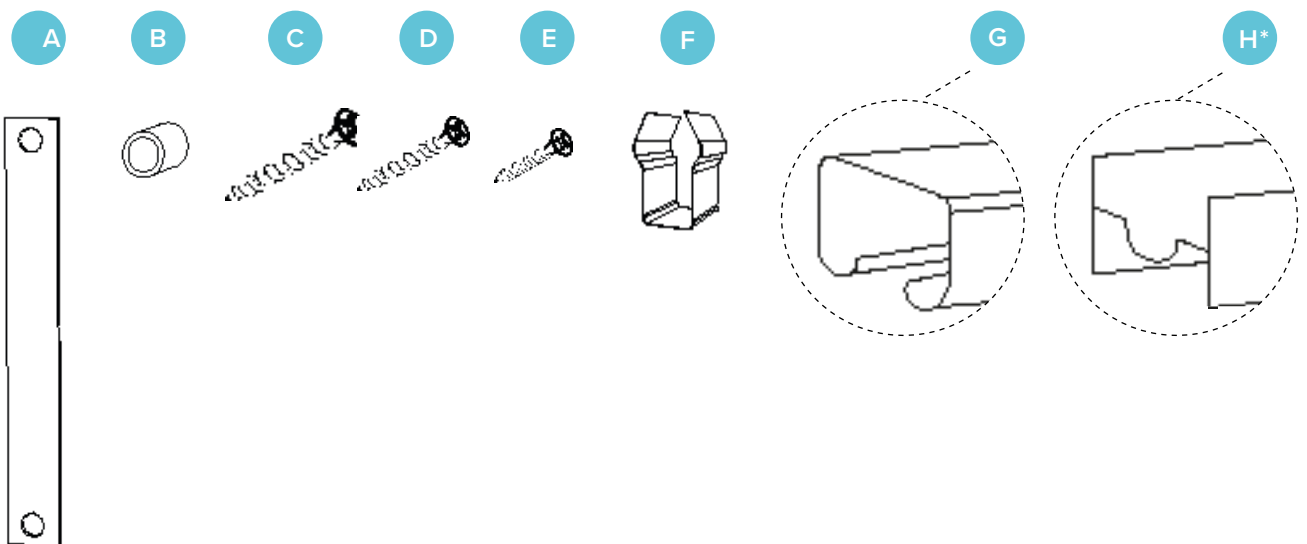

- A** Steel plate
- B** Plastic tubes
- C** Wood screw Ø 4 mm x 35 mm
- D** Wood screw Ø 4 mm x 25 mm
- E** Wood screw Ø 3 mm x 20 mm
- F** Clips
- G** Top rail
- H*** Female profile or H profile (the female profile is already assembled for folding door type 3)



Extra help?

Watch the installation video of the folding door here.



INSTALLATION TOP RAIL

- 1 Mark where the door should go in the doorway. Draw a pencil line around it. This is where the door will be mounted against the walls and ceiling.
- 2 Hold the top rail against the ceiling at the level of the pencil line and mark dots where the top rail has holes. The side of the top rail where the holes are closer together will be on the side of the wall where the door package hangs.
- 3 Make a small bore of max 2.5 mm diameter at the marked dots.
- 4 Remove the small aluminium profile mounted in the folding door. This profile is fitted to prevent damage during transport. You will no longer need this profile to continue the assembly of the door.
- 5 Do not move the door and keep the door in identical position. Carefully slide the long top rail into the door in the same position as the small piece.
- 6 Place the door straight with the top rail facing up and the handle on the side where you wish to open and close the door.
- 7 Put the door in the doorway. The door is self-supporting and may remain straight for a short time.
- 8 Take the wood screws **D** and screw the top rail into the ceiling. Start with the ends. Meanwhile, you can move the door to clear the other holes.

INSTALLATION CLIPS

- 9 Rectangular openings are provided in the steel profile at the back of the door. Take the measurement from the ground to the centre of the rectangular opening.
- 10 Put a pencil mark on the wall at the same height. Do this for all rectangular openings.
- 11 Make a small bore of max 2.5 mm diameter at the marked dots.
- 12 Place the clips in steel on the marked dots with the **D** wood screws. Place the clips vertically.
- 13 Check if the clips are nicely aligned and vertical.
- 14 **! ATTENTION! To prevent damage to the inner magnet, the door package should first be carefully folded together before the door is pushed against the clips.**

Place the door package against the clips and do an additional check on the position of the clips in relation to the openings. (They should be nicely inside the U-profile.) Check at the back of the door that they are inside the U-profile. Then press the door at the top and then at the bottom until the door fits against the wall everywhere.

INSTALLATION FEMALE PROFILE

- 15 Take the female profile and place it on the last open side of the opening. Take the direction of the profile into account. The 2 large round openings in the profile should be at the same height as the magnet in the folding door.
 - 16 Mark the holes in the profile on the wall.
 - 17 Make a small bore of max 2.5 mm diameter at the marked dots.
 - 18 Place the female profile with wood screws **E**. The 2 large round openings are not placed with a screw. In case of a folding door with lock, first press the lock hook into the female profile before attaching the female profile.
 - 19 Insert the 2 plastic tubes **B** into the 2 large round openings.
 - 20 Take the steel plate **A** with 2 bores and place the plate with the 2 **C** wood screws.
- Your Aporta folding door is now ready for use!